

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
REVEAL
ASPECT
SUBPAGE
TXT
VOL+/-
CH+/-
UP
DOWN
LEFT
RIGHT
OK
↻
SLEEP
DTV
INFO
CH LIST
FAV

AUTO
STILL
HOLD
RED
GREEN
YELLOW
BLUE
NICAM / A2 / AUDIO
REC MENU
CANCEL
USB
P. MODE
SIZE
S. MODE
SUBTITLE
SKIP NEXT/PREV
REPEAT
DTV / RADIO
INDEX
EJECT
STOP
REC
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, REVEAL, ASPECT, SUBPAGE, TXT, VOL+/, CH+/, P+/, ABAJO, IZQUIERDA, DERECHA, BACK, SLEEP, DTV, TV/DTV, INFO, CH LIST, EPG, FAV, AUTO, STILL, HOLD, ROJO, VERDE, AMARILLO, AZUL, NICAM / A2 / AUDIO, REC MENU, CANCEL, USB, / SOURCE, P MODE, SIZE, S MODE, SUBTITLE, SKIP NEXT/PREV, P+/, REPEAT, DTV / RADIO, INDEX, EJECT, STOP, REC, REW, PLAY / PAUSE, FWD, .