FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.

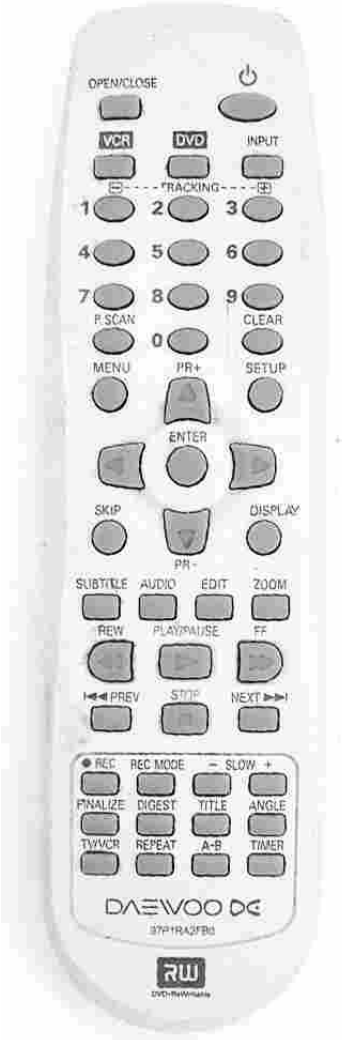

⏻
AUDIO
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT
SKIP
DISPLAY
ZOOM
SETUP
SUBTITLE
SLOW+
SLOW -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
REPEAT
TIMER
TV/VCR
P.SCAN

EDIT
A – B
OPEN/CLOSE
STOP
REC
REW
PLAY/PAUSE
FWD
VCR
DVD
DIGEST
FINALIZE
ANGLE
TRACKING+
TRACKING -
TITLE
REC MODE

POWER, AUDIO, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, / SOURCE, SKIP, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, SLOW+, VOL+, SLOW, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, REPEAT, BACK, TIMER, SLEEP, TV/VCR, TV/DTV, PSCAN, INFO, EDIT, EPG, FAV, OPEN/CLOSE, / NET TV, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY/PAUSE, AMARILLO, FWD, AZUL, VCR, DVD, DIGEST, FINALIZE, ANGLE, TRACKING+, TRACKING, TITLE, REC MODE, .