FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.

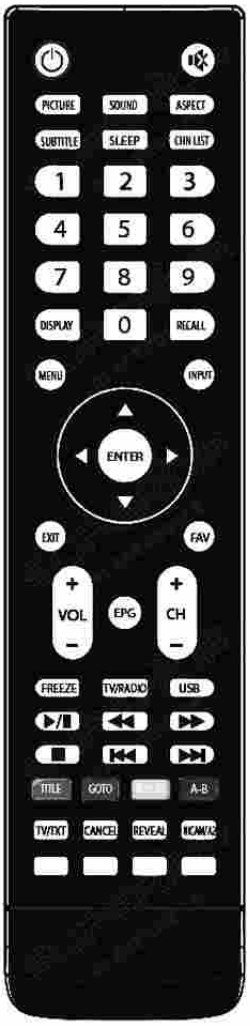

⏻
🔇
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT
CHN LIST
DISPLAY
PICTURE
SOUND
TV/TXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
RECALL
SLEEP
TV/RADIO
EPG

FAV
ASPECT
FREEZE
RED / TITLE
GREEN / GOTO
YELLOW / REPEAT
BLUE / A – B
NICAM / A2
CANCEL
USB
REVEAL
SUBTITLE
SKIP NEXT
SKIP PREV
STOP
REW
PLAY / PUASE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, / SOURCE, CHN LIST, DISPLAY, PICTURE, SOUND, TV/TXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, RECALL, BACK, SLEEP, TV/RADIO, TV/DTV, EPG, FAV, ASPECT, / NET TV, FREEZE, / SMART, ROJO / TITLE, ROJO, VERDE / GOTO, VERDE, AMARILLO / REPEAT, AMARILLO, AZUL / A, AZUL, NICAM / A2, CANCEL, USB, REVEAL, SUBTITLE, SKIP NEXT, SKIP PREV, STOP, REW, PLAY / PUASE, FWD, .